

LCH-AC950

A/C System Maintenance Centre

LCH-AC950



NOTE:

- 1) Carefully read the user manual before using, and keep it well for future reference.
- 2) Carefully check the device parts list before using. For any doubt, contact Canada Auto Solutions Inc immediately.
- 3) Due to the product upgrade, differences between the user manual and the device will not be further noticed. Take the device as standard.

注意事项



Safety

- A. The machine is designed to be used and repaired by qualified personnel only.
- B. The machine is designed to be used for LCH-AC950 and LCH-AC950 refrigerants. Other refrigerant types are not applicable. Different types of refrigerants cannot be mixed, otherwise it is easy to cause equipment failure or damage the air conditioning system.
- C. Fill the A/C system with the quantity of refrigerant recommended by the manufacturer.
- D. Keep away from moving parts and rotating elements such as cooling fans, alternators and heating components, etc. to avoid harm.
- E. Wear protective clothing gloves and goggles.
- F. As automotive air conditioning pipe flushing, the operator must be fully familiar with the automotive air conditioning system and operation of the machine. Check whenever the engine is turned off that the ignition key is turned to the full OFF position!
- G. Do not expose the machine to direct sunlight or rain. Use only in well-ventilated work areas.
- H. Never exceeding 30 ° tilt in the transit process upside down is strictly prohibited.
- I. Do not touch the machine high voltage power supply section, and do not maintain the machine as power on.
- J. Care for the manual.
- K. We reserve the right to modify the contents of this document without prior notice to our customers.

L.

CONTENTS

<u>1. Introduction</u>	5
<u>1) Outline</u>	5
<u>2) Features</u>	5
<u>3) Specifications</u>	5
<u>2. Functions</u>	6
<u>1) Primary functions</u>	6
<u>2) Subsidiary functions</u>	6
<u>3. Operation</u>	7
<u>1) Parts descriptions</u>	7
<u>2) First use</u>	8
<u>3) Preparations before Run Flushing function</u>	9
<u>4) Power On</u>	9
<u>5) Flushing-Recovery</u>	11
<u>6) Recovery/Recycling</u>	12
<u>7) Vacuum</u>	12
<u>8) New oil adding</u>	12
<u>9) Recharging</u>	13
<u>10) Auto. Mode</u>	14
<u>11) Database</u>	14
<u>12) Equipment Maintenance</u>	14
<u>12-1) Exchange dry filter</u>	15
<u>12-2) Clean pipe of the unit</u>	15
<u>12-3) Calibration of load cell (operate by professionals)</u>	15
<u>12-4) Drain used oil</u>	15
<u>12-5) Empty internal refrigerant</u>	15
<u>12-6) Vacuum System Pipeline</u>	16
<u>12-7) Change vacuum pump oil</u>	16
<u>12-8) Discharge non-condensable gases</u>	17
<u>13) Supply tank</u>	17
<u>14) System function</u>	18
<u>14-1) Language</u>	18
<u>14-2) Units</u>	19
<u>15) Equipment info</u>	19
<u>15-1) System inquiry</u>	19
<u>15-2) Servicer info</u>	19
<u>15-3) Equipment info</u>	19
<u>16) Help</u>	20

1. Introduction

1) Outline

LAUNCHER LCH-AC950 Dual A/C Service Machine is designed with the latest design technique which uses the best control principle and the manufacturing process. A/C System Maintenance Centre is a smart equipment collecting of the A/C flushing, recovery, recycling, recharging and other functions in one. It's with the beautiful shape, humanized operation interface, and advanced manufacturing processes to make the A/C maintenance professional and simple. The machine is designed to be used for LCH-AC950 and LCH-AC950 refrigerants.

2) Features

- A. For LCH-AC950 and LCH-AC950 refrigerants.
- B. Fully automatic, easy to operate.
- C. Internal pipeline of A/C system flushing, effectively cleared the internal greasy and fouling, to restore the A/C system performance.
- D. With forward flushing, reverse flushing, and pulse flushing functions, which greatly improve the cleaning effect.
- E. Using a large-size glass tube with LED backlighting, can effectively observe the entire cleaning process.
- F. Vertically installing the HP & LP gauges let the operator be able to observe the pressure parameters timely even in the car.
- G. Unique design of the pipeline to achieve the high recycling rate no matter with the gas or the liquid.
- H. Easy to operate with the concise operating interface.
- I. Designed with a large size LCD.
- J. Database.
- K. Program and database can be updated.
- L. With a printer.
- M. The self-cleaning function of the equipment can ensure that the refrigerant stored in the equipment meets the reuse level.

3) Specifications

- A. Working conditions:
Ambient temperature: 0~50°C
Relative humidity: <85%
- B. Voltage input: AC220V±10%~50/60Hz AC110V±10%~60Hz (see as label)
- C. Compressor: 12.12cm³
- D. Vacuum pump: 7.2m³/h, 2Pa
- E. Load cell for tank: 30kg/±10g, 2pcs
- F. Load cell for oil bottle: 6kg/±5g
- G. Tank: 12L, 2pcs
- H. PAG oil bottle: 300ml
- I. POE oil bottle: 300ml
- J. Used oil bottle: 500ml
- K. LCD display: 240*128
- L. Working pressure: max. 20bar
- M. HP gauge: -1bar~35bar
- N. LP gauge: -1bar~20bar
- O. Max. Work Pressure: 20bar
- P. Backlighting: LED
- Q. Language: Chinese and English (can be customized)

2. Functions

1) Primary functions

- A. Dual refrigerant system
- B. Support dual refrigerant oil type
- C. Automatic flushing
- D. Automatic recovering/recycling
- E. Automatic/manual used oil drain
- F. Vacuum timing.
- G. Automatic/manual new oil injection
- H. Quantitative recharging
- I. Each function can operate independently
- J. Auto mode
- K. Database
- L. Print

2) Subsidiary functions

- A. Parameter setting
- B. Refrigerant supplement
- C. Pipeline self-cleaning
- D. Equipment emptying
- E. Equipment vacuum
- F. Electronic scale calibration (professional)
- G. Machine maintenance (Dry-filter exchanger, vacuum pump oil exchanger)
- H. Printer test
- I. Equipment status query
- J. Equipment info inquiry
- K. Help

3. Operation

1) Parts descriptions



Isolated supply tank location to avoid contamination




Machine Side View




2) First use


- A. In order to avoid damage to the electronic scale during transportation, the electronic scale is protected when shipped. Open the back door, take out all the fillers on both sides of the tank and under the scale pan, and loosen the supporting screw under the scale plate to make the scale handle the suspended state. As shown in the figure below:

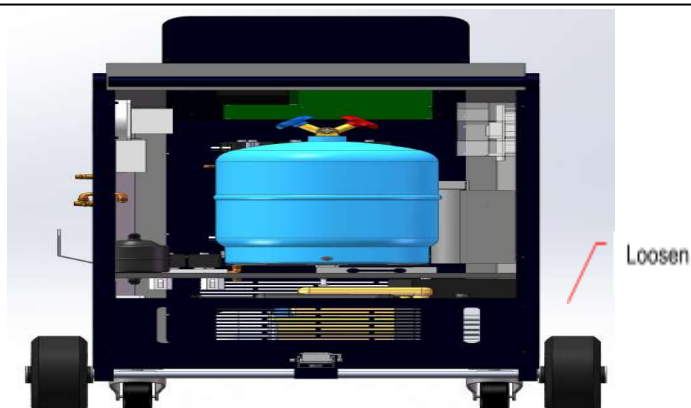


- B. Connect the power supply and power on. Please operate as follows.
C. Set the language: select one and press ENTER.

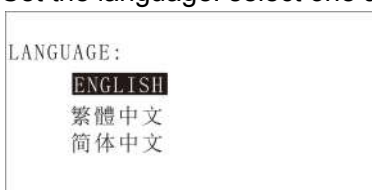

- C. Set the units: select one and press ENTER

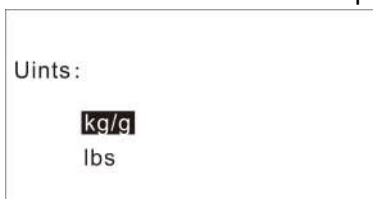


- D. Install the LCH-AC950 storage tank back of the machine.

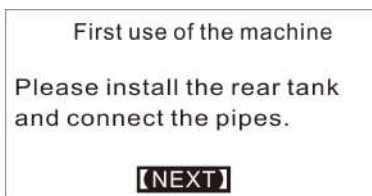

- Place the storage tank on the rear scale and fix it.
- Connect the red and blue pipes to the red and blue valve interfaces of the tank, tighten them (it is recommended to apply a small amount of stop glue), and open the two valves.

- E. Connect the hoses and couplers

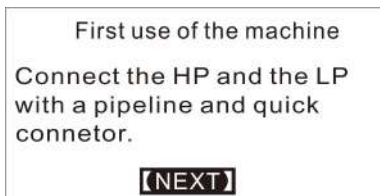

- Connect the two **RED hoses** to the **HP ports**.
- Connect the two **blue hoses** to the **LP ports**.
- Connect the **RED** and **BLUE** couplers of **LCH-AC950** to the **RED** and **BLUE** pipes of **LCH-AC950** respectively.
- Connect the **RED** and **BLUE** couplers of **LCH-AC950** to the **RED** and **BLUE** pipes of **LCH-AC950** respectively.

- F. Initialization

First use of the machine
Vacuum the system pipes now.
After vacuum, the next step
will be done automatically.

- G. Supply refrigerant to the new equipment (please refer to the SUPPLY FUNCTION section)

Initialization completed
Please run the supply
function.

Note:

- As the new equipment is empty, the Flushing and Recharging functions will not be performed.
- In order to ensure all functions are normal, about 4kg LCH-AC950 and 4kg LCH-AC950 refrigerant need to be filled to the tanks. If it is not necessary to use the Flushing function, replenish at least 2kg.

- H. Please read this user manual carefully before operating.

3) Preparations before Run Flushing function

- A. Check the refrigerant type of the automobile air conditioning, and connect the right couplers to the A/C service ports, and open the couplers on.
- B. Start the car, and run the A/C for about 5 minutes.
- C. Check whether the high and low pressure of A/C is normal. Check whether there is abnormal noise when the compressor works. If there is any abnormality, it must be repaired first.
- D. Turn off the air conditioner and turn off the engine.
- E. Empty the used oil bottle. Add an appropriate amount of new oil into the new oil bottles (**Note: PAG and Poe types**).
- F. Turn on and prepare for work.

Warning: When the machine is running, never to run the A/C system!

4) Power On

- A. If the equipment detects abnormal information, it will give a prompt, which should be handled in time. If there is no prompt message, it will go to the next interface directly.

■ W01: R134a tank empty.
■ W09: R1234yf tank empty.
■ W03: Pressure is too high.
■ W10: Dry-filter service.
It Can flush/recovery 5 times
■ W11: Vacuum pump service
【ENTER】 :HELP 【EXIT】 :Exit

- B. Select the refrigerant type: LCH-AC950 or LCH-AC950. The default is the last operation type.

The last refrigerant type : R134a

The current refrigerant type

R134a
R1234yf



- C. If the refrigerant type is different from last time, please operate according to the prompts.

<p>System pipeline changing. . .</p> <p>Please block the HP and LP ports. Empty the used oil bottle.</p> <p>[NEXT]</p>	<p>System pipeline changing. . .</p> <p>Need about a few minutes. Please wait.</p> <p>[NEXT]</p>	<p>System pipeline changing. . .</p> <p>Refrigerant type conversion completed!</p> <p>[NEXT]</p>
---	---	---







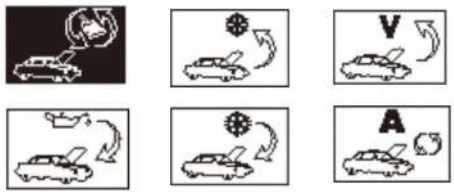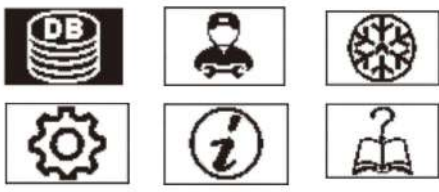



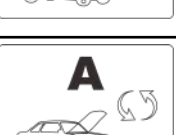
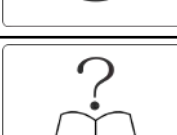
If the process is terminated artificially, it will can't be into the main function and back to the last Interface.

<p>System pipeline changing. . .</p> <p>Refrigerant type conversion not completed!</p> <p>[NEXT]</p>	<p>The last refrigerant type: R134a</p> <p>The current refrigerant type</p> <p>R134a R1234yf</p>
---	---

D. After completion, enter the function interface.

 <p>FLUSHING-RECOVERY R134a</p>	 <p>DATABASE R134a</p>
---	---

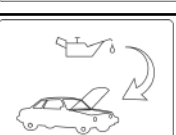Description:

	<p>Flushing- Recovery This function includes the flushing and recovery process.</p>		<p>Database Check the amount of Refrigerant & oil</p>
	<p>Recovery Recovery of the refrigerant of the A/C system.</p>		<p>Equipment Maintenance Exchange dry-filter, Pipe-line cleaning, Calibration load cell.</p>
	<p>Vacuum Timing vacuum.</p>		<p>Supply Refrigerant Transfer the refrigerant into the equipment tank.</p>
	<p>New oil adding Fill the new oil into the A/C system.</p>		<p>System function Supply,Parameter setting,Exchange filling tank,Change refrigerant type</p>
	<p>Recharging Recharge quantitative.</p>		<p>Equipment info System info,Service info, Equipment info.</p>
	<p>Auto. Mode Automatically all the processes.</p>		<p>Help Descriptions of the alarming code.</p>

5) Flushing-Recovery

A. By this function, it will be able to clean out the refrigerant oil and oil sludge to exchange the refrigerant

entirely to improve the performance of the compressor. And also it will recover the refrigerant remaining in the A/C system.

- B. Before flushing the pipeline of the automotive A/C system, please turn on the A/C system and run it for 5 to 10 minutes. And set it as the lowest temperature and medium wind.

- C. **Turn off the automotive air conditioning.**

Warning: do not start the air conditioning during the flushing process! Otherwise, it easily damages the air-conditioning and risks an accident!

- D. In order to achieve good flushing performance, the flushing time should be more than 20 minutes. General: the cleaning time for a single-evaporator is 20 minutes, and that for double-evaporator is about 30 minutes. The longer the cleaning time, the better the cleaning effect.

Note: The flushing time does not include the time of the recovery process. Once the flushing is finished, the machine will run the recovery function automatically.

- E. Operations:



E-1: Select the Flushing Function and press the ENTER key.

E-2: Set the flushing time.

E-3: Press the ENTER key to start.

- F. During the working, it can automatically carry out forward, reverse and pulse cleaning, and automatically discharge the used oil separated from the cleaning into the old oil bottle.

- G. After the cleaning process, it will automatically recover the refrigerant. According to the ambient temperature and the structure of the A/C system, the recovery process will last for 10-30 minutes. Please do not manually terminate the work.

- H. When finished, it'll stop automatically. And it will discharge the separated used oil again, and then shut down automatically and give a prompt.

 
Notice: it's normal for there to be sounds in the solenoid valve during the working process. Please do not stop it. The used oil can be drained out automatically.

Warning: In case of sudden power failure or accidental termination during the Flushing-Recovery process, please re-select the Flushing-Recovery function. The cleaning time can be set shorter and then run again. It is important not to operate other functions.

6) Recovery/Recycling

- A. By this function, it will recover the refrigerant remaining in the A/C system.

- B. Operations:



B-1: Select the Recovery Function and press the ENTER key.

B-2: Press the ENTER key to start.

B-3: After recovery is over, it'll drain the used oil automatically.

 
- C. When finished, it will discharge the separated used oil, and then stop automatically.

7) Vacuum

- A. By this function, it will clean the water vapor out from the A/C system.

- B. It should be more than 15 minutes. Generally, it needs 15 minutes at least for the air conditioning only with front wind and 20 minutes for the front and rear wind.

- C. Operations:



C-1: Select the Vacuum Function and press the ENTER key.

C-2: Set the vacuum time.

C-3: Press the ENTER key to start.

D. When finished, it'll stop automatically.

 
8) New oil adding

- A. It must be able to be done after the vacuuming process.
- B. Pour new oil into the new oil bottle.


Note:

- 1) **Add 20ml of new oil after the used oil has drained out to avoid allowing air into the air conditioning system.**
- 2) Pour the new oil into the corresponding oil bottle. **PAG oil into the PAG bottle and POE oil into the POE bottle. The two types of oil cannot be mixed, otherwise it will cause damage to the air conditioning system. Please check the vehicle technical manual or label, do not add the wrong type!**
- 3) If a non-vacuum state is detected, the function cannot be run.


C. Operations:





- C-1: Select the New oil adding Function and press the ENTER key.
- C-2: Set the oil type. Must be correct!
- C-3: Select method: you can choose manual control, or set the filling amount.

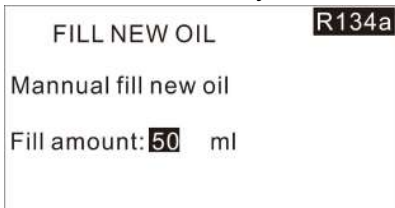

C-3.1 If you select Manual control, press and hold ENTER key for injection, and release the key to stop.

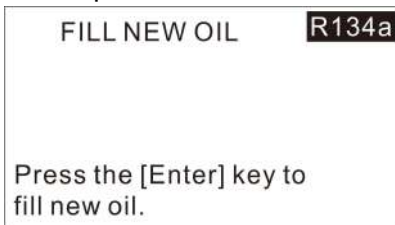

C-3.2 after setting the filling amount, press ENTER key, and it will stop automatically.

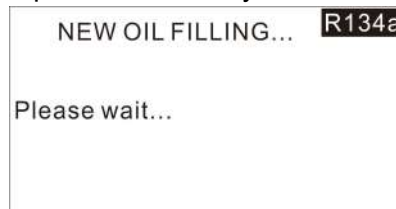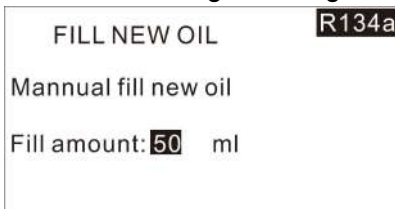

9) Recharging




- A. Select the Recharging Function and press the ENTER key.
- B. Set the recharge amount.
- C. Press the ENTER key to start.
- D. When finished, it'll stop automatically.


Note: The recharging amount setting is as follows.

Method 1: Set the amount directly.

Method 2: Set the amount by the database. Steps as following:

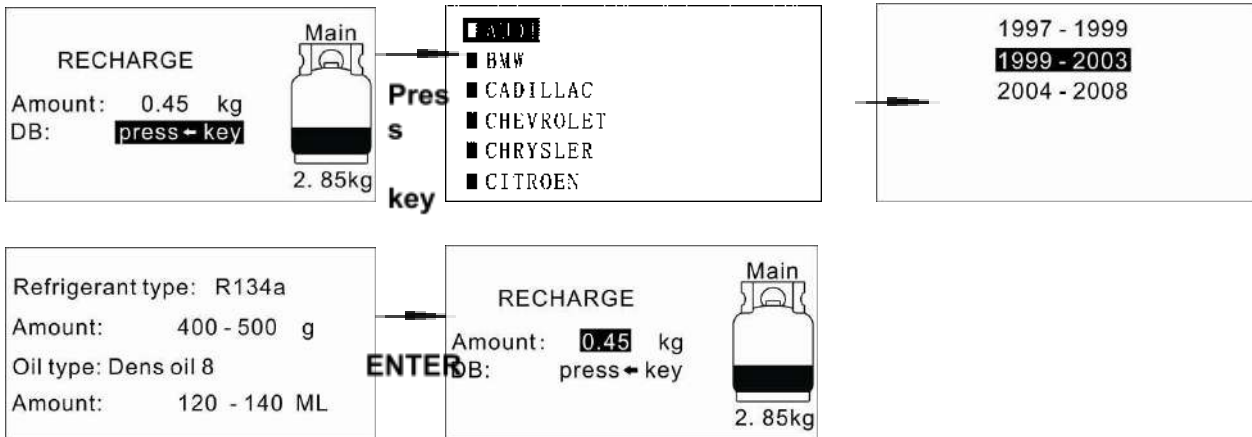


Note: In the recharging process, if the menu shows, it means that you need to turn on the car air-conditioning to complete the recharging process. Later, you should supply new refrigerant into the tank.

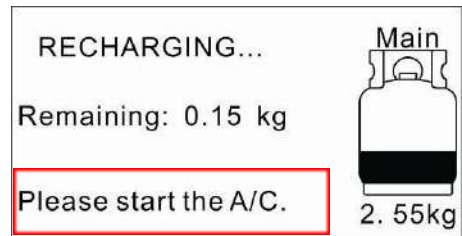


10) Auto. Mode

 - A. Under this mode, all of the functions can be run full automatically after setting the parameters.
- B. Before running, The used oil must drain out entirely and new oil be refilled into the bottle. **Pay attention to the oil type.**
- C. Operations:



C-1: Select the Auto. Mode Function and press the ENTER key.
C-2: Set all parameters.

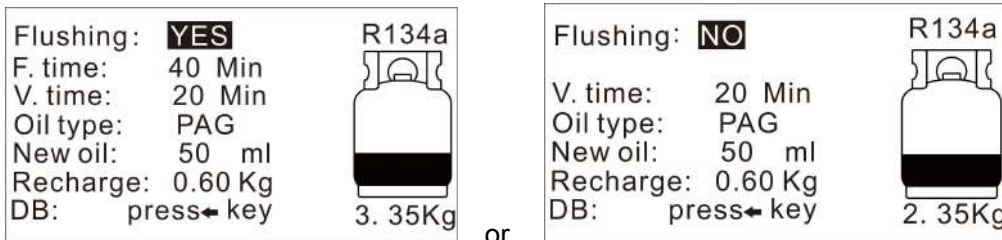

C-2: Press the ENTER key to start.


- D. When finished, it'll stop automatically.

11) Database



Here you can read the refrigerant type and filling amount and the refrigerant oil type and filling amount of the automotive.

12) Equipment Maintenance

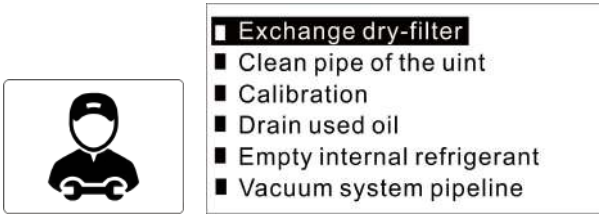

12-1) Exchange dry filter

- A. The dry filter must be exchanged when it reaches the lifetime. There will be a message.
- B. If not exchange the dry-filter timely, it will not be able to run the recovery, flushing and supplying functions.
- C. Operations:
 - C-1: Please check the ID of the dry-filter at the label. Which is the SN.
 - C-2: Select Exchange dry-filter Function and press ENTER key.
 - C-3: Input the ID.
 - C-4: And then do step by step as the information.

Note: Please pay attention to the mounting direction of the dry-filter.

12-2) Clean pipe of the unit

- A. Through this function, it can effectively remove the oil mist and trace moisture in the internal pipeline of the equipment, and ensure that the system is clean and pollution-free.
- B. After a period of use, such as 3months, this function should be rerun.
- C. Operations:
 - C-1: Power on, select refrigerant type, then select Equipment Maintenance.
 - C-2: Select Clean Pipe of The Unit function and press ENTER key.
 - C-3: Connect the hoses and couplers well to the coupling side of the equipment, and open the couplers.
 - C-4: And then press ENTER key to run.

Warning: this function is performed according to the type of refrigerant.

12-3) Calibration of load cell (operate by professionals)

- A. When the load cell is not precise, it needs to be calibrated.
- B. You need to input the default password (1510) before using this function.
- C. To calibrate the main tank load cell, please prepare a 10~20kg weight.
To calibrate the oil bottle load cell, please prepare a 1-3kg weight.
- D. Follow the prompts step by step.

Note: if encountering errors, please check according to the messages.

12-4) Drain used oil

- A. It can control the used oil drained manually.
- B. Select Drain Used Oil function and press ENTER key.
- C. Press and hold ENTER key to drain, and release the key to stop.

12-5) Empty internal refrigerant

- A. Through this function, the refrigerant in the equipment can be emptied.
- B. It is necessary to use another refrigerant recovery equipment (say as MM).
- C. Operations:
 - C-1: Connect the HP & LP ports of the equipment with the HP & LP ports of the MM. Pay attention to the type of refrigerant.
 - C-2: Select Empty Internal Refrigerant function and press ENTER key.
 - C-3: Confirm the pipes connected well, and press ENTER key.
 - C-4: Run Recovery function of MM.
 - C-5: After recovery ends, stop and power off the MM. And then press the ENTER key to the next step.
 - C-6: Wait for a moment. When it shows END, the pipes connected with two equipment can be disconnected.
 - C-6: Run the Vacuum System Pipeline function.

Warning: this function is performed according to the type of refrigerant.

12-6) Vacuum System Pipeline

Through this function, the internal pipeline of the equipment can be completely vacuumed to the factory state.

Before running this function, it must do the Empty Internal Refrigerant function.


Operations:

- C-1: Power on, select refrigerant type, then select Equipment Maintenance.
- C-2: Select Vacuum System Pipeline function and press ENTER key.
- C-3: Connect the hoses and couplers well to the coupling side of the equipment, and open the couplers.
- C-4: And then press ENTER key to run.

Warning: this function is performed according to the type of refrigerant.

12-7) Change vacuum pump oil

- A. When the pump oil becomes murky or the machine displays a maintenance message, the vacuum pump oil must be changed.
 - B. If the pump oil is not changed in time, the vacuum pump will be easily damaged.
 - C. Operations:
 - C-1: Open the back-down cover.
 - C-2: Unscrew the block of the drain port to drain the old oil out entirely. Then re-back the block to the drain port.
- Note: the oil drain hole is on the same side of the window or at the bottom. There are some differences in specifications.**
- C-3: Unscrew the cap of the fill port and then fill the new oil slowly into the vacuum pump until the oil level reaches the center site. Then re-back the cap to the fill port.

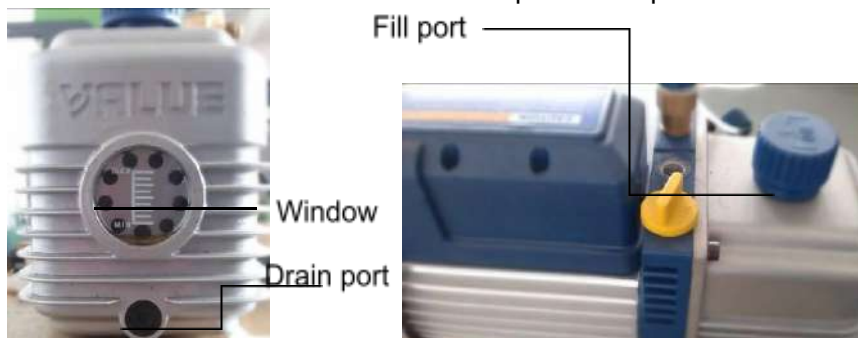

Note: the new vacuum pump oil cannot be filled too much into the vacuum pump otherwise it will spray out when working.

C-4: Re-back the cover.

12-8) Discharge non-condensable gases

- A. Due to some uncontrollable reasons, after a period of time, some incompressible gas will be accumulated in the tanks. If the gas is too much, it will cause abnormal operation of the equipment.
- B. It is necessary to discharge non-condensable gases regularly, and it is recommended to do it once a month (if the use frequency is low, the exhaust cycle can be extended). Or, when the machine shows the High-pressure Alarm, it needs to do it immediately.
- C. Operations:
 - C-1: Remove the rear refrigerant tank and place it aside. Note: do not remove any pipes!
 - C-2: Open the back door, and there are two exhaust valves in the left middle of the machine. Open the valve slowly to discharge non-condensable gases.

Attention: slowly rotate the valve handle, stop the rotation when you hear the exhaust sound, and let the exhaust stand still.

Left valve -LCH-AC950 tank exhaust Right valve - LCH-AC950 tank exhaust



C-2: The exhaust time is about 20 seconds.



Warning: when exhausting, it is necessary to cut off the power supply and carry it out in a ventilated environment, and no fireworks are allowed!

13) Supply tank



- A. If the refrigerant amount in the main tank is less than 3kg, the flushing function can't run any more, and if less than 1kg, the recharging function also can't run any more, until enough refrigerant is supplied into the machine.
- B. Operations:

B-1: Power on, select refrigerant type, then select Supply Tank function.

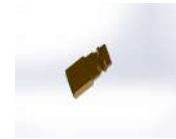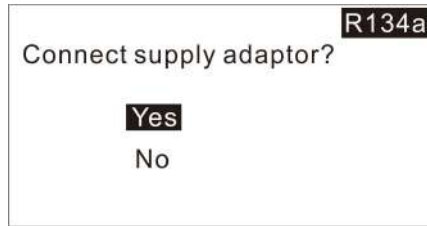

B-2: Select if use the supplying connector:

B-3.1: If use the supplying connector, the pipeline connection is as follows:

Fitting the supplying connector to the port of the fresh refrigerant tank.

Note: it should connect to the liquid port of the fresh refrigerant tank. If it has no liquid port, please place the fresh refrigerant tank upside down.

Connect the HP coupler to the supplying connector and open it.

B-3.2: If **don't** use the supplying connector, the pipeline connection is as follows:

Connect the port of the fresh refrigerant tank to the LP port of equipment.

Note: it should connect to the liquid port of the fresh refrigerant tank. If it has no liquid port, please place the fresh refrigerant tank upside down.

B-4: Open the valve of the fresh refrigerant tank.

B-5: Set the supplying amount and press the ENTER key to run.

Note: Amount of supplying: Setting the amount according to the remaining amount in the tank.

Suggestion: supplying amount = (4.5~5) - remaining amount.


B-6: When alarming, please close the valve of the fresh refrigerant tank, upright it and press the ENTER key to confirm.

B-7: After the refrigerant in the pipeline is recovered, the equipment stops automatically. Then install the quick coupling.

Special declare:

When the refrigerant is supplied to the new equipment, due to the vacuum state of the equipment system, some refrigerant will remain in the pipeline and components when supplying refrigerant to the tank, resulting in the actual amount of refrigerant recovered will be more than that shown by the equipment, which is normal.

14) System function

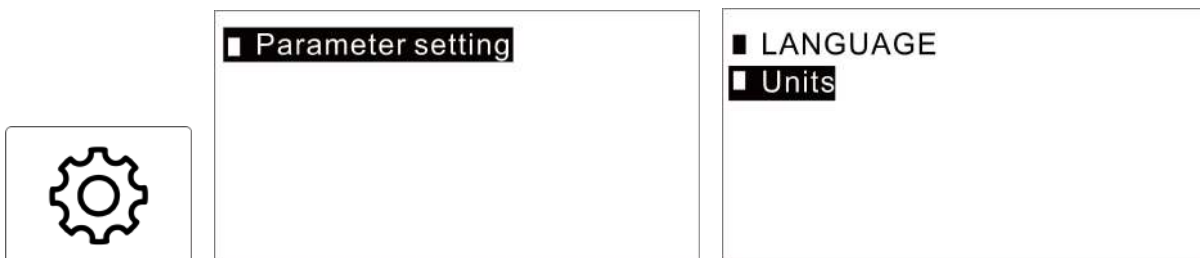

14-1) Language

Change the language

14-2) Units

15) Equipment info



15-1) System inquiry

Here you can check the working status of the machine.

Running status		
Compressor:	10	h
V-pump total:	20	h
V-pump cycle:	10	h
Dry-filter:	10	kg
Machine total:	26	times

15-2) Servicer info

Here you can set and check the servicer and dealer information.

 

Servicer:

Phone:


 
Dealer:

Phone:

The way for setting:

Press  and  at same time into the setup state.

Use the  and  to select position

Use the  and  to set the content.

15-3) Equipment info

Here you can check the SN, hardware version, software version etc.

SN:	842501000001
Software version:	V3.0.0/V3.0
Hardware version:	V1.2
DATABASE:	V1.0
MFD:	2019-11 -13

16) Help



Here you can check all of the help messages.

Declare:

We reserve the right to modify the contents of this document without prior notice to our customers.